

# Sun Cobalt™ Control Station

---

*Maintaining and Upgrading the Hardware*



Copyright © 1997-2002 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology embodied in the product that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents> and one or more additional patents or pending patent applications in the U.S. and other countries.

This document and the product to which it pertains are distributed under licenses restricting their use, copying, distribution and decompilation. No part of the product or of this document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, Java, JavaScript, JDK, Sun Cobalt, Sun Cobalt RaQ, Sun Cobalt CacheRaQ, Sun Cobalt Qube and the Sun Cobalt logo are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

Netscape and Netscape Navigator are trademarks or registered trademarks of Netscape Communication Corporation in the United States and other countries.

Linux is a trademark of Linus Torvalds.

Federal Acquisitions: Commercial Software - Government Users Subject to Standard License Terms and Conditions.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright © 1997-2002 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. Tous droits réservés.

Sun Microsystems, Inc. détient des droits de propriété intellectuelle sur la technologie réunie dans le produit qui est décrit par ce document. Ces droits de propriété intellectuelle peuvent s'appliquer en particulier, sans toutefois s'y limiter, à un ou plusieurs des brevets américains répertoriés à l'adresse <http://www.sun.com/patents> et à un ou plusieurs brevets supplémentaires ou brevets en instance aux Etats-Unis et dans d'autres pays.

Ce produit ou document est distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a.

Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, Java, JavaScript, JDK, Sun Cobalt, Sun Cobalt RaQ, Sun Cobalt CacheRaQ, Sun Cobalt Qube et le logo Sun Cobalt sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

Netscape et Netscape Navigator sont des marques de fabrique ou des marques déposées de Netscape Communication Corporation aux Etats-Unis et dans d'autres pays.

Linux est une marque de fabrique de Linus Torvalds.

LA DOCUMENTATION EST FOURNIE "EN L'ETAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.

**Part Number / Numéro de pièce : 816-3091-11 Rev A**

# Maintaining and Upgrading the Hardware

---

---

## Maintenance

### Air flow

Sun Microsystems™ recommends that you check the air-intake and air-exhaust ports each month. If debris has accumulated on either the front panel or the rear fans, vacuum the debris out with a powerful vacuum cleaner.

---

## Upgrading

There are two ways to upgrade your Sun Cobalt™ Control Station:

- add a PCI expansion card (see “Adding a PCI card” on page 1-3)
- replace a failed hard disk drive (see “Replacing a hard disk drive” on page 1-5)

---

## Opening the Sun Cobalt Control Station



**Warning:** You must power down the Sun Cobalt Control Station before opening the unit.

1. Power down the control station. See “Powering Down” in the PDF *Using the LCD Console*.
2. Unplug the control station from the power supply.
3. Remove the power cord from the rear of the control station. The cable is located beside the power switch. See Figure 1.




**Note:** If the Sun Cobalt Control Station is mounted in an equipment rack, remove the control station from the rack and take it to a service area. Do not attempt this upgrade while the Sun Cobalt Control Station is still in the equipment rack.

4. Using a #2 Phillips screwdriver, unscrew the top cover of the control station. Ten screws hold the top cover in place. The screws are labeled 1 through 10 in Figure 2.

Figure 1 shows the rear view of the Sun Cobalt Control Station. Figure 2 shows how to remove the top cover of the Sun Cobalt Control Station.


Figure 1. Rear view of the Sun Cobalt Control Station

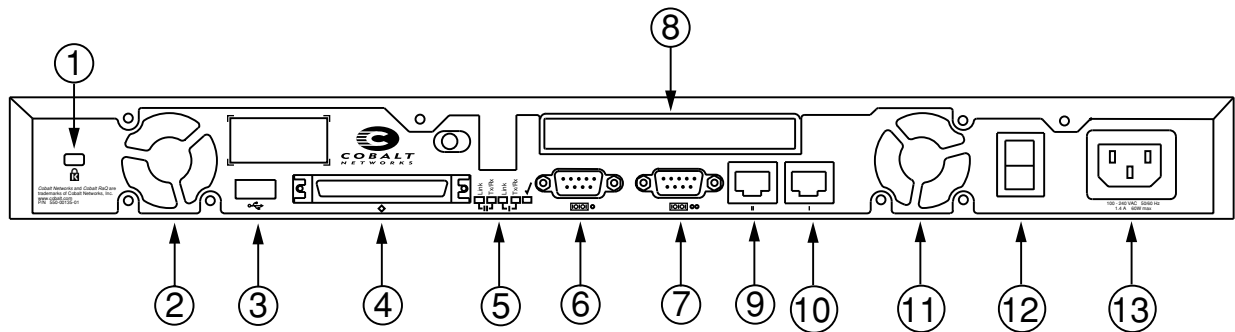

1. The **Security lock hole** is used to lock the unit to a secure location.
2. The **Cooling fans** maintain proper operating temperature. Ensure that the ventilation holes are not blocked.
3. The **USB port** provides a Universal Serial Bus (USB) connection.
4. The **SCSI connector** enables a Small Computer System Interface (SCSI) connection for connecting such devices as hard disk drives.
5. The **Network status indicators/OK to Power Off** signal network activity and information. The **OK to Power Off light** flashes when it is safe to turn the power off.
6. The **Serial console port** allows you to connect serial devices.
7. The **Serial connector** allows you to connect a UPS to the serial port for Smart UPS support.
8. The **PCI expansion slot** provides space for adding a PCI card.

The **Network connectors** enable ethernet network connections and accept the 10/100 BaseT network cables.

9. **Network connection 2.**
10. **Network connection 1.**
11. **Cooling fan.**
12. The **Power switch** toggles the power on or off.
13. The **Power socket** receives the AC cord that is provided.

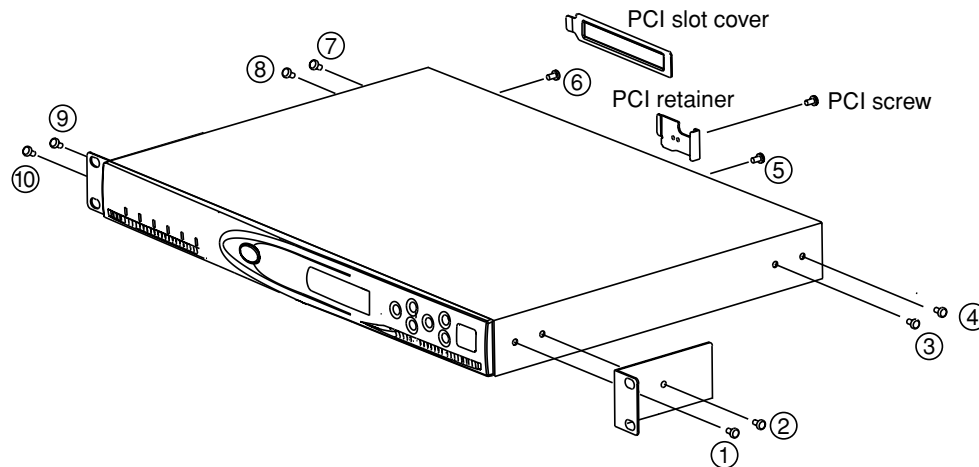**Figure 2.** Top cover on the Sun Cobalt Control Station


---

## Adding a PCI card

The Sun Cobalt Control Station unit is a single rack-unit (1RU) enclosure. Before you purchase a component to add to the Sun Cobalt Control Station, ensure that the component fits into the allocated space.

### Specifications for a PCI card

The PCI expansion slot has been designed to accommodate the PCI standard short card form factor, with some additional space for longer cards. The PCI card must be less than 10.5 inches (267 mm) long.

The current loads for a PCI card must not exceed the following limits:

- 5V @ 1A
- +12V @ 0.5A
- -12V @ 0.1A

Be careful not to damage components during the upgrade.




**Caution:** Wear an electrostatic discharge (ESD) grounding wrist strap.

1. Remove the PCI slot cover, and its retainer and screw. See Figure 2.
2. Remove the protective cover from the PCI connector.
3. Plug the PCI card into the PCI connector. See Figure 3.
4. Replace the PCI retainer and screw to hold the PCI card in place.
5. Save the PCI slot cover in case you want to remove the PCI card later.
6. Replace the top cover of the control station.
7. Secure the top cover properly and replace the ten screws that hold the top cover in place. See Figure 2.

# Printed circuit board

Figure 3 shows the layout of the printed circuit board (PCB) in the Sun Cobalt Control Station.

**Figure 3.** Layout of the printed circuit board

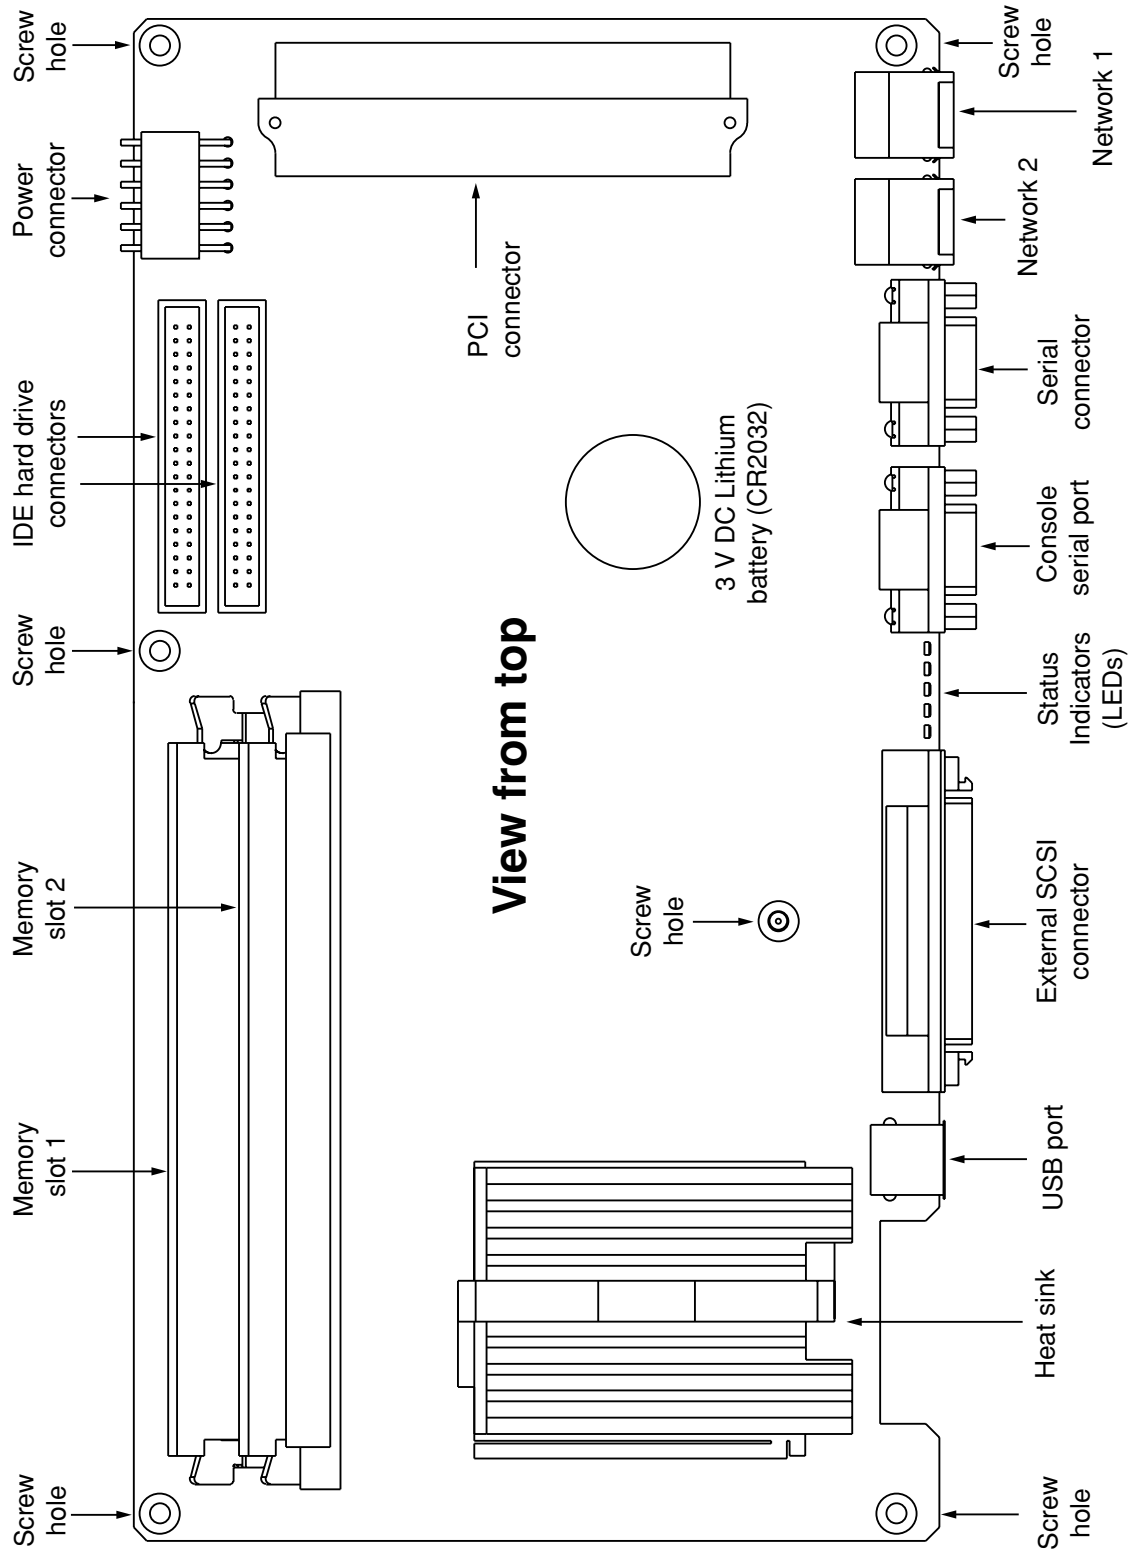

# Replacing a hard disk drive

If a hard disk drive fails in your Sun Cobalt Control Station, you can replace the drive.

## Specifications for a hard disk drive

Sun Microsystems recommends that the hard disk drive you select meet the specifications listed in Table 1. A hard disk drive that does not meet these specifications can cause reliability problems in your server.

**Table 1.** Specifications for the hard disk drive

Specification	Value
Peak current draw	Must not exceed: 1.8 amperes max (at 12 volts) 0.7 amperes max (at 5 volts)
Rotational speed	5400 rpm
Interface	Ultra ATA-33 EIDE or faster
Operating temperature	Must be able to operate in environments up to 55° C
Operating humidity	10% to 90% (non-condensing)

## Requirements

If the Sun Cobalt Control Station is mounted on an equipment rack, remove the control station from the rack and take it to a service area. Do not attempt this upgrade while the Sun Cobalt Control Station is still in the equipment rack.

Before replacing the hard disk drive, make sure that you have the following:

- a hard disk drive that meets the specifications in Table 1.
- a #2 Phillips screwdriver



**Caution:** Ensure that you are installing a hard disk drive of the same capacity as the one you are replacing.



**Caution:** Wear an electrostatic discharge (ESD) grounding wrist strap.

## Overview



**Warning:** Do not swap hard disk drives from one Sun Cobalt Control Station to another.

Also, do not install a drive, that was previously partitioned for RAID, in a Sun Cobalt Control Station as an additional (non-RAIDed) drive.



**Note:** If you have to replace an original hard disk drive (meaning a hard disk drive that Sun Microsystems installed in the server), please notify Sun Cobalt Technical Support and arrange to return the hard disk drive.

Refer to the PDF *Contacting Sun Microsystems, Inc.*

To replace a failed hard disk drive, there are a number of steps involved. These steps are explained in the following sections.

1. Power down the control station. See “Powering down” in the PDF *Using the LCD Console*.
2. Open the case of the control station.
3. Remove the failed hard disk drive.
4. Install a new hard disk drive.
5. Close the case of the control station.
6. Reboot the control station. When rebooting, the system automatically detects the new hard disk drive.

The control station automatically synchronizes the new hard disk drive to the existing hard disk drive so that the server will be able to provide disk mirroring (RAID-1).



**Note:** During the synchronization process, the Sun Cobalt Control Station cannot provide disk mirroring.

## Removing a hard disk drive

First, remove the top cover of the control station; see “Opening the Sun Cobalt Control Station” on page 1-1.

To remove a hard disk drive:

1. Unplug the IDE cable from the hard disk drive (see Figure 4).
2. Unplug the power cable from the hard disk drive (see Figure 5).
3. Remove the screw that attaches the hard-disk-drive bracket to the chassis.
4. Slide the bracket off the metal tabs on the chassis and lift the bracket and hard disk drive off.
5. On the underside of the bracket, remove the four screws that attach the hard disk drive to the bracket.
6. Remove the hard disk drive from the bracket.

Figure 4 shows the layout of the IDE cables in the Sun Cobalt Control Station.

**Figure 4.** Layout of the IDE cables


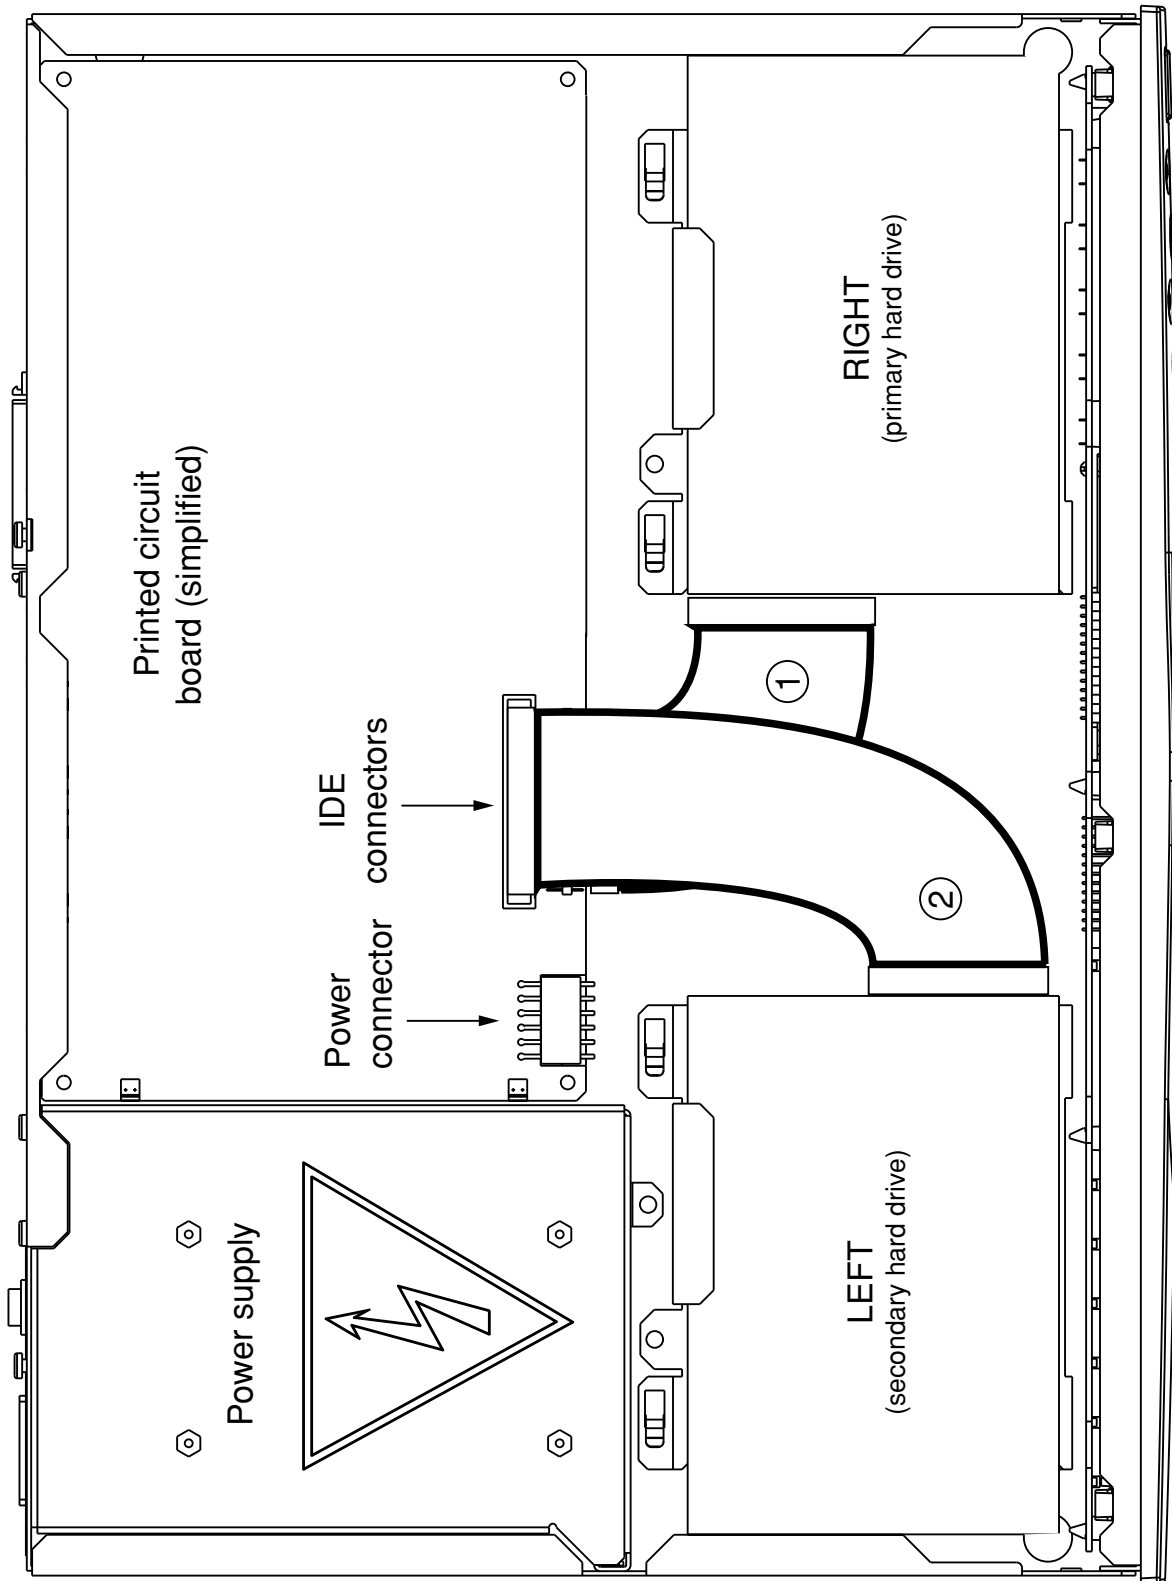


Figure 5 shows the layout of the power cables in the Sun Cobalt Control Station.

**Figure 5.** Layout of the power cables



## Installing a hard disk drive

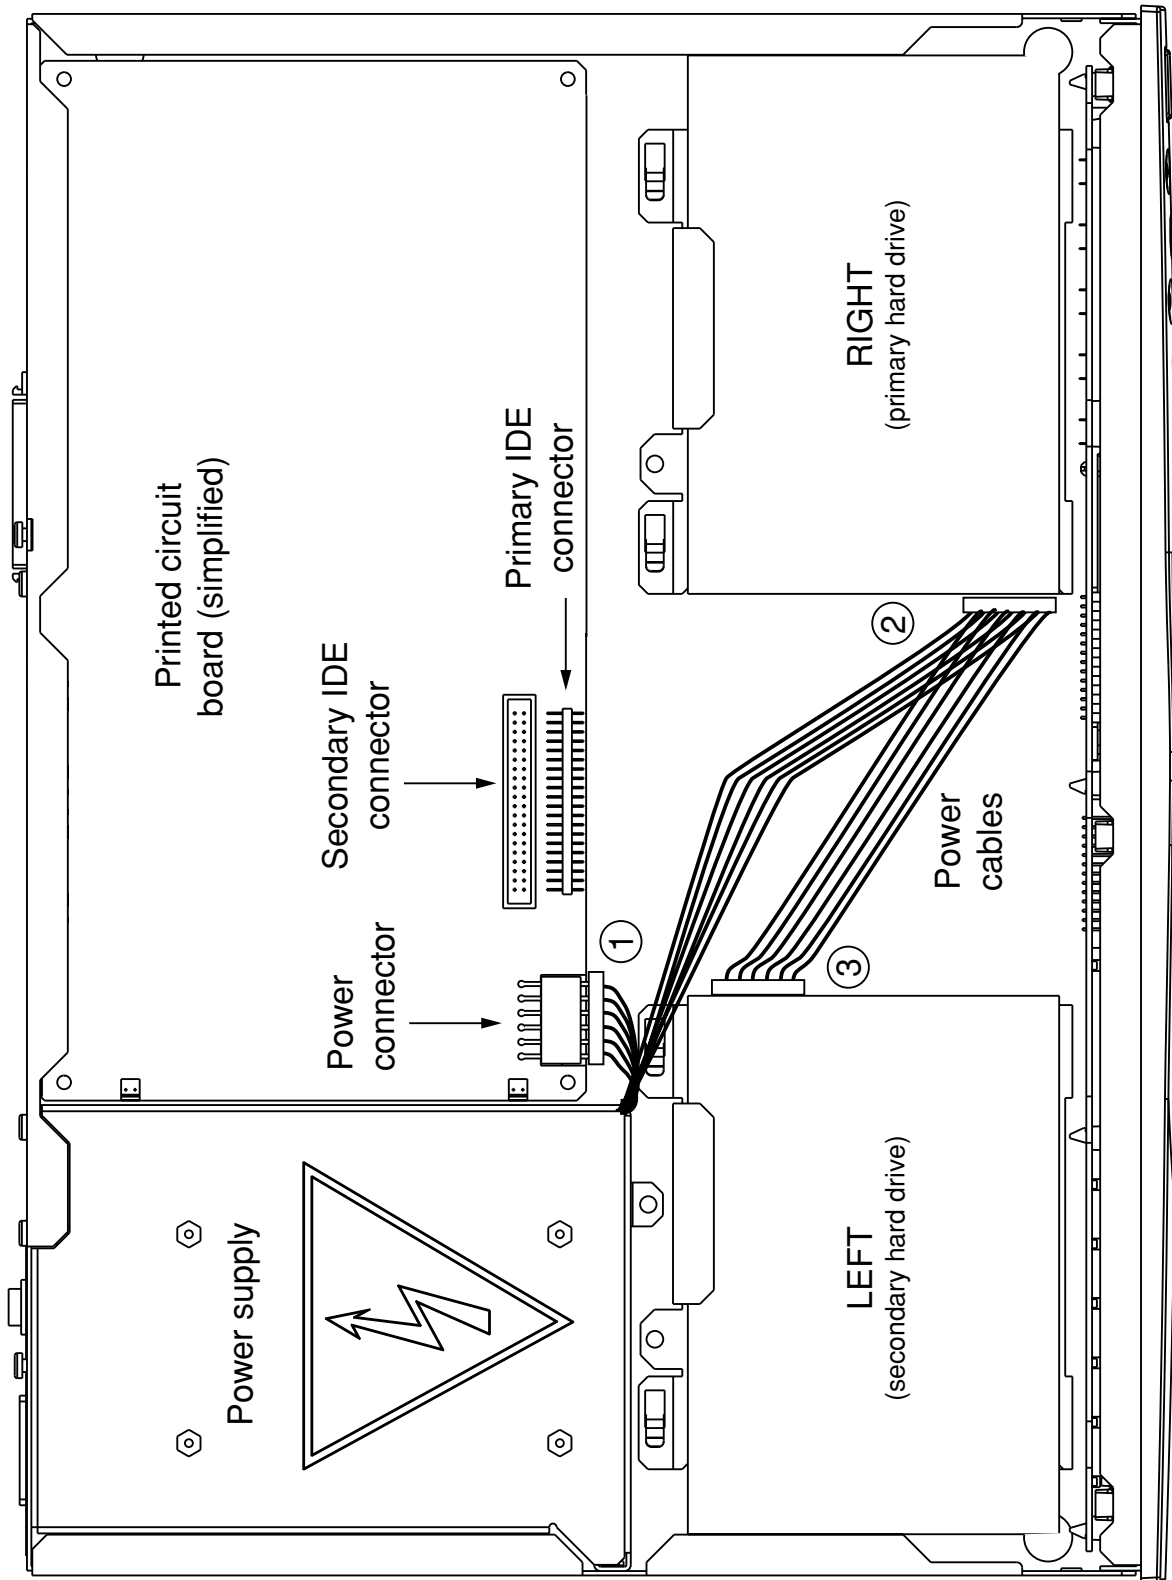

**Warning:** Do not swap hard disk drives from one Sun Cobalt Control Station to another.

Also, do not install a drive, that was previously partitioned for RAID, in a Sun Cobalt Control Station as an additional (non-RAIDed) drive.



**Caution:** Be careful not to damage components during the upgrade.



**Caution:** Wear an electrostatic discharge (ESD) grounding wrist strap.

To install a hard disk drive:

1. Place the new hard disk drive in the bracket that you removed in the previous procedure.
2. On the underside, attach the hard disk drive to the bracket with the four screws.



**Caution:** Be careful not to pinch the cables under the bracket when you replace the bracket on the chassis.

3. Set the bracket with the attached hard disk drive on the chassis and slide it onto the metal tabs. The connectors on the hard disk drive must face in to the center of the chassis, with the foam pad located next to the power supply.
4. Re-attach the bracket to the chassis with the correct screw.

## Connecting the hard disk drive

To connect the hard disk drive:

1. Plug the Y-connector power cable into the hard disk drive, see Figure 5. The connector is keyed to fit into the hard disk drive one way only.
2. Plug the IDE cable into the hard disk drive; see Figure 4. The connector is keyed to fit into the hard disk drive one way only.

## Replacing the top cover and rebooting the Sun Cobalt Control Station

To replace the top cover and reboot the Sun Cobalt Control Station:

1. Secure the top cover properly and replace the ten screws that hold the top cover in place. See Figure 2 on page 1-3.
2. Reconnect the power cord to the rear of the control station.
3. Power up the control station. The control station boots up in the normal manner.



**Note:** When rebooting, the system automatically detects the new hard disk drive.

The Sun Cobalt Control Station automatically synchronizes the new hard disk drive to the existing hard disk drive so that the server will be able to provide disk mirroring. During the synchronization process, the Sun Cobalt Control Station cannot provide disk mirroring.